

# LUMATEK

PROFESSIONAL LIGHTING

 **GUIDE**

## HOW TO CONNECT LUMATEK LIGHTS WITH THE LUMATEK CONTROL PANEL

ENGLISH - FRENCH - ITALIAN - SPANISH - PORTUGUESE



# HOW TO CONNECT LUMATEK LIGHTS WITH THE LUMATEK CONTROL PANEL

Lumatek Zeus LEDs and LED Accessories - Use and Set-Up for the different versions

## HID

LUMM0001 LUMATEK DIGITAL PANEL (HID ballasts only).




### HID CONTROL LINK CABLE

(mini jack to mini jack)

PRODUCT CODE LUMM0011

To control up to 400 ballast (200 units per each one of the two separates zones A & B only for HID Ballast (NOT for the LED), see instructions as follows:

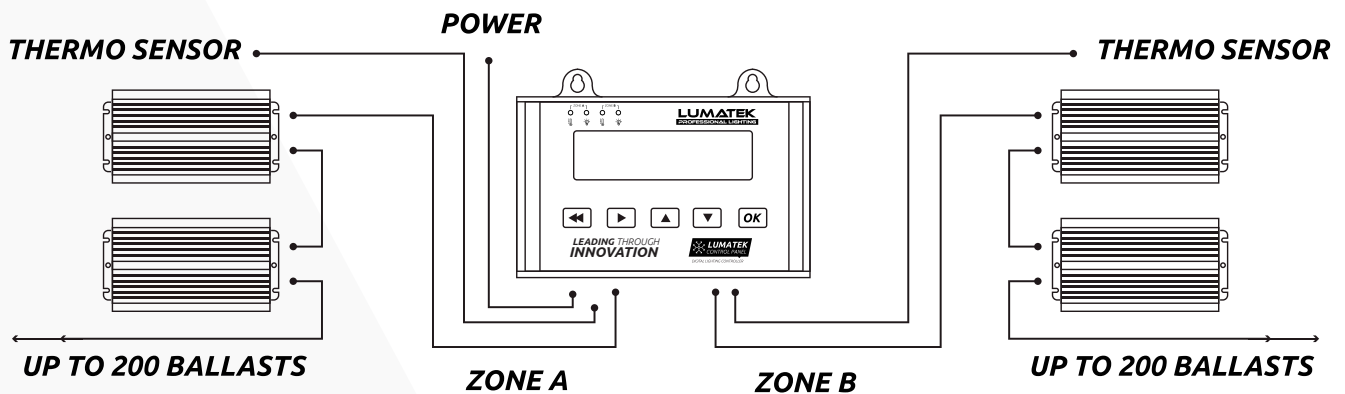

# HID + LED (old version – units sold before October 2020)

LUMM0002 **LUMATEK DIGITAL PANEL PLUS 1.0** (HID + LED)



## WORKS WITH:

### ALL HID BALLASTS

(Same control link cable) (mini jack to mini jack).

### THE OLD VERSION OF ZEUS via:

From controller to first Zeus you need **LUMM0017 LED CONTROLLER CABLE (2-pins)** two of these units already come with the **CONTROL PANEL PLUS 1.0 (LUMM0002)**



### LED CONTROLLER CABLE (2PINS)

PRODUCT CODE LUMM0017

*Designed to link Lumatek Zeus LED fixtures together in series to be externally controlled with the Lumatek Control Panel Plus.*

To connect several Old version of the Zeus you need one **LUMM0003 T-JUNCTION + 5m CONTROL LINK CABLE** (in series link) for each unit apart from the first (that is connected to the Panel).



### T-JUNCTION + 5m CONTROL LINK CABLE

PRODUCT CODE LUMM0003

*Designed to link Lumatek Zeus LED fixtures together in series to be externally controlled with the Lumatek Control Panel Plus.*

**You can connect up to 100 units per controller, 50 in each of the two different zones**  
The Control Panel Plus can manage independently each zone.

### REMOTE USE via:

#### LUMM0004 EXTENSION CABLE FOR DRIVER

To use the driver away from the fixture, you need one per every Zeus.



### LED 5m EXTENSION CABLE

PRODUCT CODE LUMM0004

*Designed to connect the driver and the LED fixture, in case the driver is used remote and away of the fixture.*

# HID + LED (new version – units sold after October 2020)

LUMM0019 **LUMATEK DIGITAL PANEL PLUS 2.0** (HID + LED)



## WORKS WITH:

### ALL HID BALLASTS

(Same control link cable) (mini jack to mini jack).

### THE NEW VERSION OF ZEUS via:

From controller to first Zeus you need **LUMM0018 LED CONTROLLER CABLE (3-pins)**, two units already come with the **CONTROL PANEL PLUS 2.0 (LUMM0019)**.



### LED CONTROLLER CABLE (3PINS)

PRODUCT CODE LUMM0018

*Designed to link Lumatek Zeus LED fixtures together in series to be externally controlled with the Lumatek Control Panel Plus.*

To connect several New versions of Zeus you need **LUMM0015 DAISY-CHAIN 5m CONTROL CABLE** for each unit apart from the first (that is connected to the Panel).



### DAISY CHAIN 5m CONTROL CABLE

PRODUCT CODE LUMM0015

*This 5m long Control Link Cable is designed to daisy-chain your LUMATEK Controllable LED Fixtures allowing a stable and precise connection without any interference.*

**You can connect up to 100 units per controller, 50 in each of the two different zones**  
**The Control Panel Plus can manage independently each zone.**

### REMOTE USE via: LUMM0016 LED 5m EXTENSION CABLES (2pack)

To use the driver away from the fixture, you need one per every Zeus.



### LED 5m EXTENSION CABLE


PRODUCT CODE LUMM0016

*These two 5m long Extension Cables are designed to connect the Lumatek driver and LED fixture, in case the driver is used remote and away of the fixture. Allowing a stable and precise connection without any interference*

# FAQ

**Q.** How can I recognise if I have a new version Zeus?

**A.** The new model has a Signal In and a Signal Out ports in the frame:

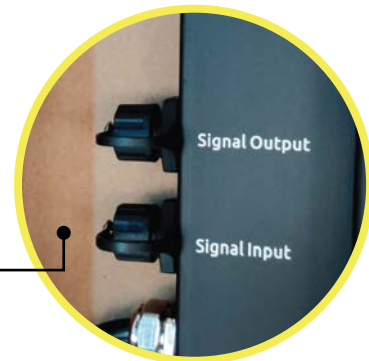

**Q.** How can i recognize which Panel I have (Digital, 1.0 and 2.0)?

**A.** The DIGITAL PANEL only comes with:

- 2 units of **LUMM0011 CONTROL LINK CABLE** (mini jack to mini jack) only;



The CONTROL PANEL PLUS 1.0 comes with:

- 2 units of **LUMM0011 CONTROL LINK CABLE** (mini jack to mini jack) only
- 2 units of **LUMM0017 LED CONTROLLER CABLE (2-pins).**
- The Packaging states the name **Control Panel Plus**



The CONTROL PANEL PLUS 2.0 comes with:

- 2 units of **LUMM0011 CONTROL LINK CABLE** (mini jack to mini jack) only.
- 2 units of **LUMM0018 LED CONTROLLER CABLE (3-pins).**
- The Packaging states the name **Control Panel Plus 2.0.**



In addition to this, the DIGITAL PANEL has the Lumatek logo with a yellow background on the top right corner and the two CONTROL PANEL PLUS have the Lumatek logo with a yellow background at the bottom right.

**Q.** How can I connect an Old version of the Zeus with a new Control Panel Plus 2.0?

**A.** You just need the **LUMM0017 LED controller cable 2-pin.** You need one per each area of the control panel, to connect the first unit only.



**Q.** How can I connect a New version of the Zeus with an old Control Panel Plus 1.0?

**A.** You just need the **LUMM0018 LED controller cable (3-pin)** You need one per each area of the control panel, to connect the first unit only.



**Q.** How can I connect the old version of the Zeus with the new version in series and vice-versa?

**A.** If you want to connect the old Zeus with the new one in series you need the: **Lumatek LED Daisy Chain Control Cable** to link Previous to Latest Version Zeus (**2 Pin - 3 Pin**) **LUMM0026**



Viceversa, if you want to connect the new Zeus with the old one in series you need the: **Lumatek LED Daisy Chain Control Cable** to link Latest to Previous Version Zeus (**3 Pin - 2 Pin**) **LUMM0027**




**PLEASE NOTE;** When connecting both old and new Zeus' to the same control panel (1.0 or 2.0), a new Zeus must be first (start) in the series within each Zone used.

**Q.** Do Lumatek Zeus LED Fixtures have Universal Control Systems Compatibility?

**A.** Lumatek Zeus LED Fixtures can be fully controlled with either the **Lumatek Digital Panel** or with any other Control System that utilises 0-10V output signal. Even if your Universal Controller has an RJ port interface, you can still run our LEDs by using a signal converter RJ to 0-10V control adaptor.

**Lumatek LED Daisy Chain Control Cable to link Zeus and Universal Controllers (0-10v to RJ Ethernet) LUMM0028**

1. Controller
2. Lighting Control Adapter
3. Splitter
4. LED Lighting

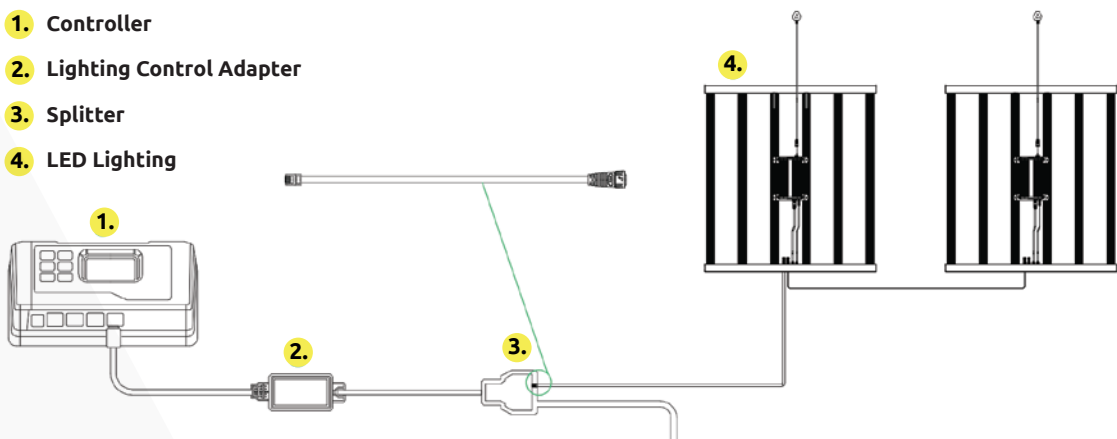

VISIT US AT [WWW.LUMATEK-LIGHTING.COM](http://WWW.LUMATEK-LIGHTING.COM)

# HELPING GROWERS GROW

STAY UP TO DATE WITH OUR **SOCIAL MEDIA** CHANNELS



**GENERAL :** [info@lumatek.co.uk](mailto:info@lumatek.co.uk)

**SALES SUPPORT :** [orders@lumatek.co.uk](mailto:orders@lumatek.co.uk)

**TECHNICAL SUPPORT :** [techsupport@lumatek.co.uk](mailto:techsupport@lumatek.co.uk)

**CONTACT :** +44(0)1233 666 475